

# Blower Motor


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

---

## 8. Blower Motor

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the glove box lower cover. <Ref. to EI-39, REMOVAL, Glove Box.>
- 3) Disconnect the connector of the blower motor.
- 4) Loosen the screw to remove the blower motor.

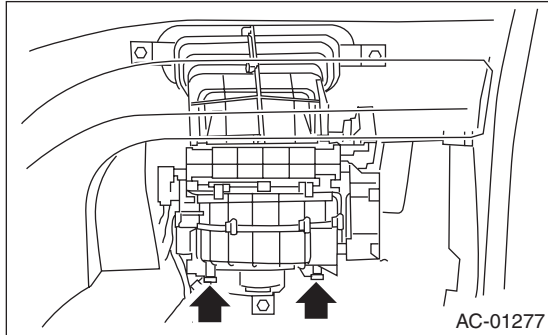

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Connect the battery positive (+) terminal to terminal No. 2 of blower motor connector, and negative (-) terminal to terminal No. 1. Check the blower motor for smooth rotation.

